



## LU45 Cartridge Loading / Unloading Guide



For issues not covered in this guide please e-mail [support@nuwavesensors.com](mailto:support@nuwavesensors.com)

## Step 1 – Inserting a New Cartridge



1. Sanitize gloves



2. Remove Cartridge from foil pack



3. Remove outer film from cartridge



4. Pull tab from cartridge

## LumAir LU45 - Cartridge Loading Guide



6. Insert cartridge fully into the unit




7. Push front button, activating unit and changing the LED to a constant green

## Step 2 – Activating the Cartridge Online


To enter a new cartridge online perform the following steps;

1. After the previous cartridge has been removed, and a new cartridge loaded, log into the online portal.

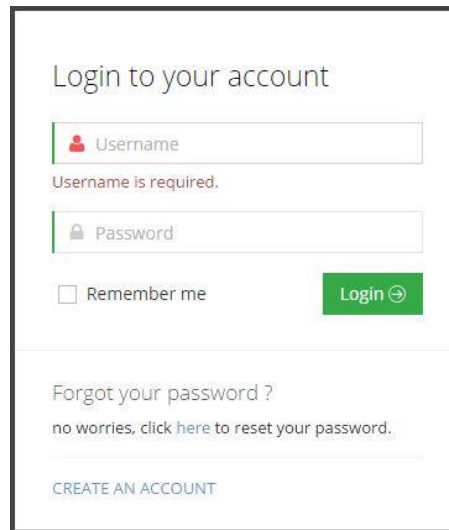

The screenshot shows a login form titled "Login to your account". It contains two input fields: "Username" and "Password". Below the "Username" field, there is a red error message that says "Username is required.". To the right of the "Password" field is a green "Login" button with a right-pointing arrow. Below the login fields, there is a checkbox labeled "Remember me" and a link that says "Forgot your password? no worries, click here to reset your password.". At the bottom of the form, there is a link that says "CREATE AN ACCOUNT".



2. On the online dashboard, select the sensor being used and enter the cartridge ID into the unit's cartridge tab. The sensor ID is supplied on the information card supplied with the cartridge.

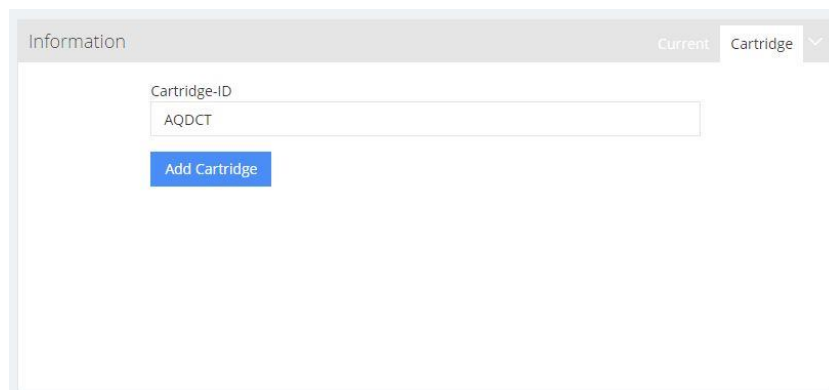


The screenshot shows a section of the online dashboard titled "Information". In the top right corner, there are two tabs: "Current" and "Cartridge". The "Cartridge" tab is selected. Below the tabs, there is a label "Cartridge-ID" and an input field containing the text "AQDCT". Below the input field is a blue button labeled "Add Cartridge".

3. Press 'Add Cartridge' and the sensor will display the cartridge details to ensure the right cartridge is being loaded. Click 'Yes' on this pop-up if the right cartridge has been selected, followed by 'Ok'.

## LumAir LU45 - Cartridge Loading Guide

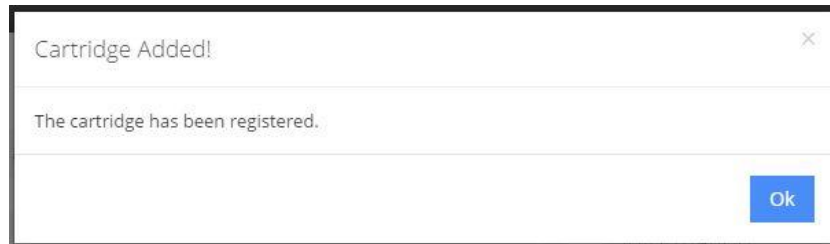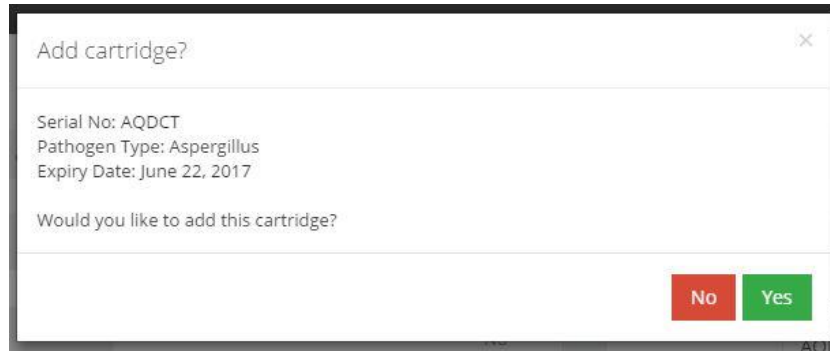

4. The cartridge is now loaded and reporting online, and the cartridge tab will display information about this cartridge until the monitoring period expires.

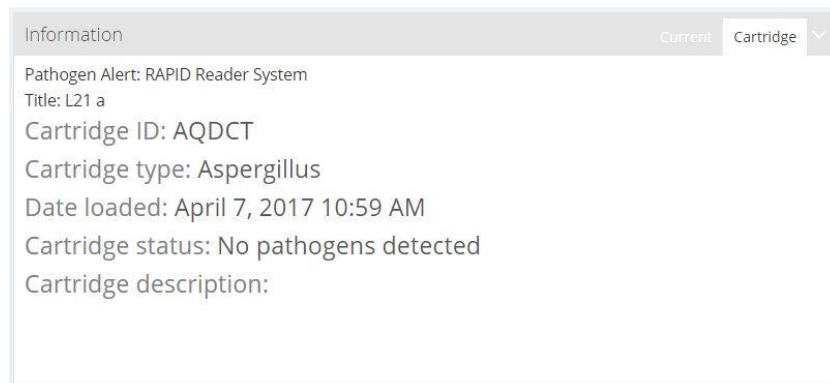

### Step 3 – Removing the Cartridge



1. Sanitize gloves



2. Push button, turning the light to blue with a flashing green



3. Place cartridge in yellow Biohazard bag - Sanitize area and remove gloves aseptically and place in bag - Seal bag

## **ORDERING INFORMATION**

---

Telephone:      (+353) 1 254 4188 (International)      (901) 800-1709 (U.S.A. only)

E-mail:            orders@nuwavesensors.com

## **TECHNICAL ASSISTANCE**

---

Telephone:      (+353) 1 254 4188 (International)

E-mail:            support@nuwavesensors.com

Visit our website at [www.nuwavesensors.com](http://www.nuwavesensors.com)

